

## Använd Ctrl + F för att söka efter din kod

Märke	Modell	Produkt nr.	Prod datum
AEG	T65280AC	91609667602	20140423
AEG	T75280AC	91609667701	20140916
AEG	T76285AC	91609667802	20120626
AEG	T76285AC	91609667803	20140519
AEG	T76289AC	91609667902	20120711
AEG	T75280AC	91609670101	20140807
AEG	T75280AC	91609670201	20130515
AEG	T75280AC	91609670202	20140829
AEG	T76289AC	91609671602	20120717
AEG	T76289AC	91609671603	20141014
AEG	T76285AC	91609671702	20120702
AEG	T76285AC	91609671703	20140802
AEG	T65280AC	91609672001	20140605
AEG	T76289AC	91609673002	20130315
AEG	T76285AC	91609673102	20120613
AEG	T76285AC	91609673103	20140916
AEG	T75280AC	91609673202	20141014
AEG	T65280AC	91609673401	20140825
AEG	T65278AC	91609674201	20110309
AEG	T76280AC	91609674701	20120714
AEG	T76280AC	91609674702	20130702
AEG	T76280AC	91609674703	20141001
AEG	T75280AC	91609675101	20130606
AEG	T75280AC	91609675102	20140802
AEG	T65270AC	91609675201	20130516
AEG	T76288AC	91609677802	20120626
AEG	T65274AC	91609678300	20110110
AEG	T65270AC	91609679801	20130606
AEG	T76280AC	91609680501	20120907
AEG	T76280AC	91609682401	20121116
AEG	T76280AC	91609682402	20140804
AEG	T76280AC	91609682501	20120613
AEG	T65280AC	91609685800	20120207
AEG	T76280AC	91609686000	20120207
AEG	T76280AC	91609686001	20120924
AEG	T76280AC	91609686002	20130701
AEG	T65270AC	91609686100	20120206
AEG	T65270AC	91609686101	20130625
AEG	T76280AC	91609687501	20120726
AEG	T76287AC	91609688701	20120626
AEG	T76287AC	91609688702	20140519
AEG	T7628EXAC	91609688901	20120702
AEG	T61270AC	91609702500	20120824
AEG	T61270AC	91609702501	20130605
AEG	T61270AC	91609702502	20140716
AEG	T71275AC	91609702700	20120817
AEG	T71275AC	91609702701	20140425
AEG	T76280AC	91609704900	20120418
AEG	T76280AC	91609704901	20120816
AEG	T76280AC	91609704902	20140807
AEG	T61270AC	91609706000	20120828
AEG	T61270AC	91609706001	20140822
AEG	T76280AC	91609709400	20120606
AEG	T76280AC	91609709401	20140319
AEG	T76280AC	91609709402	20140807

AEG	T61270AC	91609709500	20120912
AEG	T61270AC	91609709900	20120817
AEG	T61270AC	91609709901	20140710
AEG	T71270AC	91609710200	20120817
AEG	T61278AC	91609710400	20120817
AEG	T61278AC	91609710401	20130528
AEG	T61278AC	91609710402	20140520
AEG	T61270AC	91609710600	20120911
AEG	T61270AC	91609710601	20140520
AEG	T71270AC	91609710700	20120912
AEG	T71270AC	91609710701	20140521
AEG	T71270AC	91609710800	20120913
AEG	T71276AC	91609710900	20120912
AEG	T76288AC	91609711000	20120912
AEG	T76288AC	91609711001	20140703
AEG	T76282AC	91609711200	20120828
AEG	T76282AC	91609711201	20140804
AEG	T61270AC	91609711300	20120912
AEG	T61270AC	91609711301	20140812
AEG	T71270AC	91609711400	20120911
AEG	T71270AC	91609711401	20140805
AEG	T71273AC	91609711500	20120911
AEG	T76288AC	91609711600	20120912
AEG	T5127AC	91609711800	20120907
AEG	T5127AC	91609711801	20130613
AEG	T5127AC	91609711802	20140505
AEG	T71279AC	91609711902	20140508
AEG	T61270AC	91609712500	20120924
AEG	T51278AC	91609712700	20121004
AEG	T51278AC	91609712701	20130705
AEG	T51278AC	91609712702	20140618
AEG	T61270AC	91609713500	20120920
AEG	T5127AC	91609716200	20121025
AEG	T5127A	91609716201	20140825
AEG	T7127AC	91609719800	20121122
AEG	T7127AC	91609719801	20130520
AEG	T7127AC	91609719802	20140724
AEG	T61270ACE	91609720400	20130304
AEG	T61270ACE	91609720401	20141028
AEG	T61270ACE	91609720500	20130305
AEG	T61270ACE	91609720501	20141028
AEG	T5127AC	91609722900	20130119
AEG	T5127AC	91609722901	20141028
AEG	T61270AC	91609726100	20130509
AEG	T61270AC	91609726101	20141028
AEG	T51273AC	91609728300	20130527
AEG	T51273AC	91609728301	20140717
AEG	T72270AC	91609733200	20130906
AEG	T72270AC	91609733201	20140717
AEG	T72270AC	91609733300	20130906
AEG	T72270AC	91609733301	20140730
AEG	KRD7200	91609746300	20140328
AEG	T61275AC	91609746700	20140424
AEG	T72275AC	91609751600	20140716
AEG	T76280AC	91609760300	20140909
AEG	T65289NAC	91609762900	20140926
AEG	T71272NAC	91609763000	20140926

AEG	T72276NAC	91609763100	20140924
AEG	T76287NAC	91609763200	20140926
AEG	T61271AC	91609766600	20141022
AEG	T65280AC	91609775100	20150615
AEG	T76280AC	91609779400	20150707
AEG	T61275AC	91609779600	20150919
AEG	T6DBG72P	91609792800	20160922
AEG	T6DBG72P	91609792801	20210510
AEG	T6DB64375	91609792900	20160922
AEG	T6DB60379	91609793800	20160915
AEG	T6DB60378	91609794200	20160922
AEG	T6DB60375	91609794500	20160915
AEG	T6DBM720G	91609794900	20161020
AEG	T6DB72GP	91609800000	20160922
AEG	T6DB72GP	91609800001	20210510
AEG	T86280AC	91609803000	20160610
AEG	T75280AC	91609803600	20161125
AEG	T6DB40370	91609807200	20170601
AEG	T6DB40378	91609807300	20170601
AEG	T6DBG722M	91609807900	20170411
AEG	T6DBG722M	91609807901	20191219
AEG	T6DBG721M	91609808000	20170411
AEG	T6DB72KP	91609809100	20170811
AEG	T6DB72KP	91609809101	20210825
AEG	T6DBK72P	91609809300	20170811
AEG	T6DBK72P	91609809301	20210527
AEG	T6DBG72W	91609810400	20161221
AEG	T6DBG721N	91609812800	20170302
AEG	T6DBG720N	91609812900	20170302
AEG	T6DBK721	91609815200	20171023
AEG	T6DBP721K	91609844200	20180608
AEG	T6DIS724G	91609853900	20181114
AEG	TX6K720Z	91609864700	20190813
AEG	T65270AC	91609667501	20130605
AEG	T71279AC	91609711900	20120817
AEG	T71279AC	91609711901	20130617
AEG ELECTROLUX	T88800	91609617400	20070904
AEG ELECTROLUX	T88800	91609617401	20080114
AEG ELECTROLUX	T88800	91609619400	20070925
AEG ELECTROLUX	T88800	91609619401	20071221
AEG ELECTROLUX	T88800	91609623900	20071012
AEG ELECTROLUX	T88800	91609626800	20070907
AEG ELECTROLUX	T88800	91609626801	20071221
AEG ELECTROLUX	T88800	91609626901	20071031
AEG ELECTROLUX	T88800	91609633501	20080211
AEG ELECTROLUX	T65270AC	91609667500	20101106
AEG ELECTROLUX	T65280AC	91609667600	20101216
AEG ELECTROLUX	T65280AC	91609667601	20110309
AEG ELECTROLUX	T75280AC	91609667700	20101106
AEG ELECTROLUX	T76285AC	91609667800	20110120
AEG ELECTROLUX	T76285AC	91609667801	20110224
AEG ELECTROLUX	T76289AC	91609667900	20110120
AEG ELECTROLUX	T76289AC	91609667901	20110224
AEG ELECTROLUX	T75280AC	91609670100	20110224
AEG ELECTROLUX	T75280AC	91609670200	20110310
AEG ELECTROLUX	T75280AC	91609670400	20110120
AEG ELECTROLUX	T65270AC	91609670500	20110224

AEG ELECTROLUX	T65270AC	91609670600	20110111
AEG ELECTROLUX	T65270AC	91609670601	20110823
AEG ELECTROLUX	T76289AC	91609671600	20110205
AEG ELECTROLUX	T76289AC	91609671601	20110224
AEG ELECTROLUX	T76285AC	91609671700	20110212
AEG ELECTROLUX	T76285AC	91609671701	20110811
AEG ELECTROLUX	T75280AC	91609671800	20101222
AEG ELECTROLUX	T75288AC	91609671900	20101222
AEG ELECTROLUX	T65280AC	91609672000	20101216
AEG ELECTROLUX	T65270AC	91609672100	20101216
AEG ELECTROLUX	T65270AC	91609672101	20110309
AEG ELECTROLUX	T76289AC	91609673000	20110205
AEG ELECTROLUX	T76289AC	91609673001	20110309
AEG ELECTROLUX	T76285AC	91609673100	20110212
AEG ELECTROLUX	T76285AC	91609673101	20110315
AEG ELECTROLUX	T75280AC	91609673200	20110120
AEG ELECTROLUX	T75280AC	91609673201	20110309
AEG ELECTROLUX	T75288AC	91609673300	20110120
AEG ELECTROLUX	T65280AC	91609673400	20110110
AEG ELECTROLUX	T65270AC	91609673500	20110110
AEG ELECTROLUX	T65270AC	91609673501	20110309
AEG ELECTROLUX	T65278AC	91609674100	20101203
AEG ELECTROLUX	T65278AC	91609674200	20110120
AEG ELECTROLUX	T65278AC	91609674300	20110127
AEG ELECTROLUX	T76280AC	91609674700	20110215
AEG ELECTROLUX	T75280AC	91609675100	20110329
AEG ELECTROLUX	T65270AC	91609675200	20110726
AEG ELECTROLUX	T76288AC	91609677800	20110212
AEG ELECTROLUX	T76288AC	91609677801	20110905
AEG ELECTROLUX	T65276AC	91609678200	20110111
AEG ELECTROLUX	T65276AC	91609678201	20110614
AEG ELECTROLUX	T65273AC	91609678400	20110111
AEG ELECTROLUX	T76283AC	91609678500	20110212
AEG ELECTROLUX	T76283AC	91609678501	20110322
AEG ELECTROLUX	T65270AC	91609679800	20110321
AEG ELECTROLUX	T65270AC	91609682000	20110810
AEG ELECTROLUX	T65280AC	91609682100	20110810
AEG ELECTROLUX	T65280AC	91609682200	20110811
AEG ELECTROLUX	T75280AC	91609682300	20110810
AEG ELECTROLUX	T76280AC	91609682400	20110810
AEG ELECTROLUX	T76280AC	91609682500	20110810
AEG ELECTROLUX	T65273AC	91609685400	20110713
AEG ELECTROLUX	T76280AC	91609687500	20110915
AEG ELECTROLUX	T76287AC	91609688700	20110825
AEG ELECTROLUX	T7628EXAC	91609688900	20110825
AEG ELECTROLUX	T88800	91609619402	20081007
AEG ELECTROLUX	T76280AC	91609680500	20110930
AEG ELECTROLUX	T65270AC	91609690300	20111021
ELECTROLUX	EDI96150W	91609604001	20060818
ELECTROLUX	EDI96150W	91609604002	20061215
ELECTROLUX	EDI96150W	91609604003	20071231
ELECTROLUX	EDI96150W	91609606700	20060818
ELECTROLUX	EDI96150W	91609606701	20060901
ELECTROLUX	EDI96150W	91609606702	20080107
ELECTROLUX	EDI96150W	91609607900	20060818
ELECTROLUX	EDI96150W	91609607901	20071001
ELECTROLUX	EDI96150W	91609607902	20080107

ELECTROLUX	EDI96150W	91609608300	20060818
ELECTROLUX	EDI96150W	91609608301	20061215
ELECTROLUX	EDI96150W	91609608302	20071231
ELECTROLUX	EDI96150W	91609608303	20090619
ELECTROLUX	EDI96150W	91609608304	20090918
ELECTROLUX	EDI96150W	91609608500	20060818
ELECTROLUX	EDI96150W	91609608501	20071001
ELECTROLUX	EDI96150W	91609608502	20080218
ELECTROLUX	EDI96150W	91609612500	20061013
ELECTROLUX	EDI96150W	91609613400	20061201
ELECTROLUX	EDI96150W	91609613600	20061201
ELECTROLUX	EDI96150W	91609613601	20071001
ELECTROLUX	EDI96150W	91609613602	20090218
ELECTROLUX	EDI96150W	91609613603	20090417
ELECTROLUX	EDI96150W	91609616700	20070112
ELECTROLUX	EDI96150W	91609616701	20071001
ELECTROLUX	EDI96150W	91609616702	20080121
ELECTROLUX	EDI96150W	91609619500	20070427
ELECTROLUX	EDI96150W	91609619501	20080114
ELECTROLUX	TKSL5E100	91609627900	20071116
ELECTROLUX	TKSL5E100	91609627901	20080822
ELECTROLUX	EDI96150W	91609631300	20080208
ELECTROLUX	EDC2096GDW	91609689900	20120524
ELECTROLUX	EDC2096GDW	91609689901	20130822
ELECTROLUX	EDC2096GDW	91609691200	20120904
ELECTROLUX	EDC2096GDW	91609691300	20120605
ELECTROLUX	EDC2096GDW	91609691400	20120615
ELECTROLUX	EDC2086PDW	91609691500	20120904
ELECTROLUX	EDC2086PDW	91609691600	20120605
ELECTROLUX	EDC2086PDW	91609691800	20120531
ELECTROLUX	EDC2086PDW	91609691801	20130516
ELECTROLUX	EDC2086PDW	91609691802	20140717
ELECTROLUX	EDC2086PDW	91609691900	20120619
ELECTROLUX	EDC2086PDW	91609692000	20120619
ELECTROLUX	EDC2086PDW	91609692001	20141028
ELECTROLUX	EDC2086PDW	91609692100	20120605
ELECTROLUX	EDP2074PDW	91609692300	20120713
ELECTROLUX	EDP2074PDW	91609692301	20130523
ELECTROLUX	EDP2074PDW	91609692302	20140827
ELECTROLUX	EDP2074PDW	91609692400	20120917
ELECTROLUX	EDP2074PDW	91609692401	20140827
ELECTROLUX	EDP2074PDW	91609692500	20121002
ELECTROLUX	EDC2086PDW	91609693800	20120606
ELECTROLUX	EDC2086PDW	91609693801	20130604
ELECTROLUX	EDC2086PDW	91609693803	20141117
ELECTROLUX	EDC2086PDW	91609693900	20120606
ELECTROLUX	EDC2086PDW	91609694000	20120606
ELECTROLUX	EDC2086PDW	91609694001	20131015
ELECTROLUX	EDC2086PDW	91609694100	20120606
ELECTROLUX	EDC2086PDW	91609694101	20130523
ELECTROLUX	EDC2086PDW	91609694102	20141028
ELECTROLUX	EDP12074PDW	91609694200	20120730
ELECTROLUX	EDP12074PDW	91609694201	20140828
ELECTROLUX	EDP2074PDW	91609694300	20120718
ELECTROLUX	EDP2074PDW	91609694301	20130520
ELECTROLUX	EDP2074PDW	91609694302	20141104
ELECTROLUX	EDP2074PDW	91609694400	20120718

ELECTROLUX	EDP2074PDW	91609694401	20130717
ELECTROLUX	EDP2074PDW	91609694600	20120730
ELECTROLUX	EDP2074PDW	91609694601	20130830
ELECTROLUX	EDP2074PDW	91609697700	20120802
ELECTROLUX	EDP2074PDW	91609697701	20140625
ELECTROLUX	EDP2074PDW	91609697702	20180921
ELECTROLUX	EDP2074PDW	91609697800	20120731
ELECTROLUX	EDC2096GEW	91609698100	20120531
ELECTROLUX	EDC2089POW	91609698200	20120601
ELECTROLUX	EDC2089POW	91609698201	20130604
ELECTROLUX	EDC2089POW	91609698202	20140721
ELECTROLUX	EDP2074PFW	91609699600	20120730
ELECTROLUX	EDP7000W	91609699800	20120817
ELECTROLUX	EDP7000W	91609699801	20140811
ELECTROLUX	EDP2074PDW	91609700400	20120917
ELECTROLUX	EDC2096GDW	91609700500	20121029
ELECTROLUX	EDP2074PEW	91609700700	20130912
ELECTROLUX	EDP2074PEW	91609700701	20181001
ELECTROLUX	EDP2074PEW	91609701100	20120917
ELECTROLUX	EDP2074PEW	91609701101	20130527
ELECTROLUX	EDP2074PEW	91609701102	20140819
ELECTROLUX	EDP2074PEW	91609701200	20121204
ELECTROLUX	EDP2074PEW	91609701201	20140522
ELECTROLUX	EDC2086PDW	91609701600	20121212
ELECTROLUX	EDC2086PDW	91609701601	20140521
ELECTROLUX	EDP2074PMW	91609701801	20121127
ELECTROLUX	EDP2074PMW	91609701802	20140716
ELECTROLUX	EDC2096GYW	91609703200	20120615
ELECTROLUX	EDC2096GYW	91609703201	20130626
ELECTROLUX	EDC2096GZW	91609703300	20120615
ELECTROLUX	EDC2096GZW	91609703301	20130604
ELECTROLUX	EDP2074PZW	91609708200	20120917
ELECTROLUX	EDP2074PZW	91609708201	20130716
ELECTROLUX	EDP2074PZW	91609708202	20141105
ELECTROLUX	EDC2086PDW	91609708300	20121210
ELECTROLUX	EDC2086PDW	91609708400	20130212
ELECTROLUX	EDC2086PDW	91609708401	20180207
ELECTROLUX	EDC2086PDW	91609708500	20130227
ELECTROLUX	EDC2086PDW	91609708501	20180116
ELECTROLUX	EDP2074PDW	91609709000	20130128
ELECTROLUX	EDP2074PDW	91609709100	20130322
ELECTROLUX	EDP2074PDW	91609709101	20180103
ELECTROLUX	EDC2096GEW	91609712100	20120626
ELECTROLUX	EDC2096GEW	91609712101	20130731
ELECTROLUX	EDC2086PEW	91609716400	20121025
ELECTROLUX	EDC2084PSW	91609717700	20121015
ELECTROLUX	EDP2074PIW	91609720200	20130121
ELECTROLUX	EDP2074PDW	91609722400	20130320
ELECTROLUX	EDP2074PDW	91609722401	20180130
ELECTROLUX	EDC2086GDW	91609723900	20130206
ELECTROLUX	EDC2086GDW	91609723901	20130701
ELECTROLUX	EDC2086GDW	91609723902	20140904
ELECTROLUX	EDC2086GDW	91609724000	20130426
ELECTROLUX	EDC2086GDW	91609724001	20140904
ELECTROLUX	EDC2086GLW	91609724100	20130206
ELECTROLUX	EDC2086GLW	91609724101	20130719
ELECTROLUX	EDPP47401DW	91609725400	20130426

ELECTROLUX	EDPP47401DW	91609725401	20141017
ELECTROLUX	EDPP47401DW	91609725900	20130426
ELECTROLUX	EDPP47401DW	91609725901	20140702
ELECTROLUX	EDP2074GDW	91609733000	20130813
ELECTROLUX	EDP2074GDW	91609733001	20140604
ELECTROLUX	EDP2074GDW	91609733100	20130813
ELECTROLUX	EDP2074GDW	91609733101	20140819
ELECTROLUX	EDC2087GEW	91609733900	20130822
ELECTROLUX	EDC2087GEW	91609733901	20140709
ELECTROLUX	EDP2075GDW	91609734100	20130904
ELECTROLUX	EDP2075GDW	91609734101	20140828
ELECTROLUX	EDC2088GDW	91609734200	20130919
ELECTROLUX	EDC2088GDW	91609734201	20140929
ELECTROLUX	EDC2085POW	91609734300	20130905
ELECTROLUX	EDC2085POW	91609734301	20140929
ELECTROLUX	EDC2085POW	91609734302	20181002
ELECTROLUX	EDC2086GLW	91609735700	20130911
ELECTROLUX	EDP2074GDW	91609735800	20130910
ELECTROLUX	EDC2096GDW	91609735900	20130913
ELECTROLUX	EDC2086GDW	91609737200	20131119
ELECTROLUX	EDC2086GW3	91609748300	20140409
ELECTROLUX	EDP2074GW3	91609748400	20140410
ELECTROLUX	EDC2086PDE	91609762700	20140923
ELECTROLUX	EDC2089POE	91609762800	20140923
ELECTROLUX	EDC2086PDW	91609773100	20151013
ELECTROLUX	EDC2086PDW	91609773101	20181009
ELECTROLUX	RDP2074GDW	91609774400	20150624
ELECTROLUX	RDC2086PDW	91609774500	20150612
ELECTROLUX	EDC2086GDW	91609779000	20150705
ELECTROLUX	EDC2086PDW	91609781600	20151223
ELECTROLUX	EDC2086PDW	91609781601	20181121
ELECTROLUX	EDC2086PDW	91609791500	20160829
ELECTROLUX	EDC2086PDW	91609791501	20180206
ELECTROLUX	EDC2075GDW	91609803700	20160809
ELECTROLUX	EDC2188GDB	91609805200	20160826
ELECTROLUX	EW6C5722CM	91609822300	20181114
ELECTROLUX	EW6C5752CM	91609822400	20181025
ELECTROLUX	EW6C4753CM	91609822500	20181114
ELECTROLUX	EW6C4753CM	91609822501	20191018
ELECTROLUX	EW6C4753CM	91609822502	20191030
ELECTROLUX	EDC2289GDD	91609825100	20170411
ELECTROLUX	EDC2086PDW	91609829200	20180105
ELECTROLUX	EDC2086PMW	91609833000	20171114
ELECTROLUX	EDP2074PMW	91609833100	20171118
ELECTROLUX	EDP2074PMW	91609833101	20181109
ELECTROLUX	EW6C527PP	91609836600	20181018
ELECTROLUX	EW6C527P	91609836700	20180625
ELECTROLUX	EW6CR527P	91609836800	20180831
ELECTROLUX	EDC704GEWA	91609840200	20190101
ELECTROLUX	EDC704GEWA	91609840201	20190313
ELECTROLUX	EDC704GEWA	91609841800	20190101
ELECTROLUX	EDC704GEWA	91609841801	20190313
ELECTROLUX	EW6C527G2	91609844900	20180523
ELECTROLUX	EW6C427B1	91609845600	20180706
ELECTROLUX	EW6C427P2	91609845900	20180809
ELECTROLUX	EW6C274PZ	91609846700	20180629
ELECTROLUX	EW6C274PZ	91609846701	20191019

ELECTROLUX	EW6C274PZ	91609846702	20191028
ELECTROLUX	EW6C274PZ	91609846703	20210624
ELECTROLUX	EW6C4753CB	91609847300	20180718
ELECTROLUX	EW6C5722CB	91609847400	20180822
ELECTROLUX	EW6C5724CB	91609847500	20180608
ELECTROLUX	EW2C327R1	91609855800	20181017
ELECTROLUX	EW2C327R1	91609855801	20200918
ELECTROLUX	EW6C4735SC	91609855900	20181109
ELECTROLUX	EW6C4735SC	91609855901	20200922
ELECTROLUX	EW6C4723SC	91609856000	20181109
ELECTROLUX	EW6C4723SC	91609856001	20200923
ELECTROLUX	EDC704GEWA	91609866500	20190903
ELECTROLUX	EW2C337R2	91609872900	20190715
ELECTROLUX	EW2C337R2	91609872901	20201012
ELECTROLUX	EW6C2074PB	91609883200	20201125
ELECTROLUX	EW6C527PU	91609885300	20200424
ELECTROLUX	EW6C527PC	91609917000	20210713
ELEKTRO HELIOS	TK8803	91609743100	20140809
HUSQVARNA	QW6173	91609795000	20161020
HUSQVARNA	QW6173	91609874000	20190913
HUSQVARNA	QT16W70B	91609914700	20211005
HUSQVARNA ELECTRC	QW600S	91609624000	20070921
HUSQVARNA ELECTRC	QW600S	91609624001	20071130
HUSQVARNA ELECTRC	QW6070	91609682800	20110823
HUSQVARNA ELECTRC	QW7080	91609682900	20110905
HUSQVARNA ELECTRC	QW7080	91609682901	20120619
HUSQVARNA ELECTRC	QW6080	91609687600	20110912
HUSQVARNA ELECTRC	QW6071	91609713200	20120921
HUSQVARNA ELECTRC	QW6071	91609713201	20140703
HUSQVARNA ELECTRC	QW6072	91609766400	20141022