

Använd Ctrl + F för att söka på din modell

Märke	Modell	Servicenummer	Industrikod
IKEA	C120	853989496000	853989496000
IKEA	C120	853989496000	853989496001
IKEA	C121	853989415000	853989415000
IKEA	C121	853989415000	Q0912840000
IKEA	C121	853989415000	853989415001
IKEA	C121	853989415000	Q0912840001
IKEA	C124	853989416000	853989416000
IKEA	C124	853989416000	853989416001
IKEA	CAV120A+	850370496000	850370496000
IKEA	CAV120A+	850370496000	Q0912360000
IKEA	CAV120A+	850370496000	850370496001
IKEA	CAV120A+	850370496000	Q0912360001
IKEA	CAV120A+	850370496000	850370496002
IKEA	CAV120A+	850370496000	Q0912360002
IKEA	CAV121A+	850370415000	850370415000
IKEA	CAV121A+	850370415000	Q0912350000
IKEA	CAV121A+	850370415000	850370415001
IKEA	CAV121A+	850370415000	Q0912350001
IKEA	CAV121A+	850370415000	850370415002
IKEA	CAV121A+	850370415000	Q0912350002
IKEA	CB180	853976296040	853976296040
IKEA	CB180	853976296040	Q0904710000
IKEA	CB180	853976296040	853976296041
IKEA	CB180	853976296040	Q0904710001
IKEA	CB180	853976296040	853976296042
IKEA	CB180	853976296040	Q0904710002
IKEA	CB180	853976296040	853976296043
IKEA	CB180	853976296040	Q0904710003
IKEA	CB180NF	850375196000	850375196000
IKEA	CB180NF	850375196000	850375196001
IKEA	CB180NF	850375196000	850375196002
IKEA	CB180NF	850375196000	850375196003
IKEA	CB181	853976215060	853976215060
IKEA	CB181	853976215060	Q0904700000
IKEA	CB181	853976215060	853976215061
IKEA	CB181	853976215060	Q0904700001
IKEA	CB181	853976215060	853976215062
IKEA	CB181	853976215060	Q0904700002
IKEA	CB181	853976215060	853976215063
IKEA	CB181	853976215060	Q0904700003
IKEA	CB181NF	850375115000	850375115000
IKEA	CB181NF	850375115000	Q0920090000
IKEA	CB181NF	850375115000	850375115003
IKEA	CB181NF	850375115000	Q0920090003
IKEA	CB184	853976216040	853976216040
IKEA	CB184	853976216040	853976216041
IKEA	CB184	853976216040	853976216042

Använd Ctrl + F för att söka på din modell

Märke	Modell	Servicenummer	Industrikod
IKEA	CB184	853976216040	853976216043
IKEA	CB184NF	850375116000	850375116000
IKEA	CB184NF	850375116000	850375116002
IKEA	CB184NF	850375116000	850375116003
IKEA	CB601W	853976296030	853976296032
IKEA	CB601W	853976296030	853976296031
IKEA	CB603W	855111396010	855111396012
IKEA	CB603W	855111396010	855111396013
IKEA	CB603W	855111396010	855111396011
IKEA	CB607W	855111001430	855111001432
IKEA	CB607W	855111001430	855111001433
IKEA	CB607W	855111001430	855111001431
IKEA	CB610W	853976501040	853976501041
IKEA	CB610W	853976501040	853976501042
IKEA	CB641W	853976216030	853976216031
IKEA	CB643CH	855111316010	855111316012
IKEA	CB643CH	855111316010	855111316013
IKEA	CB643CH	855111316010	855111316011
IKEA	CB647CH	855111016420	855111016422
IKEA	CB647CH	855111016420	855111016423
IKEA	CB647CH	855111016420	855111016421
IKEA	CB651W	853976215050	853976215051
IKEA	CB651W	853976215050	Q0921750001
IKEA	CBEF180A+	850375396000	850375396000
IKEA	CBEF181A+	850375315000	850375315000
IKEA	CBEF181A+	850375315000	Q0903960000
IKEA	CBEF184A++	850375316000	850375316000
IKEA	CF120	853989596000	853989596001
IKEA	CF120E	853986796000	853986796001
IKEA	CF121E	853986715000	853986715000
IKEA	CF121E	853986715000	Q0912820000
IKEA	CF121E	853986715000	853986715001
IKEA	CF121E	853986715000	Q0912820001
IKEA	CF124	853989516000	853989516000
IKEA	CF124	853989516000	853989516001
IKEA	CF124E	853986716000	853986716000
IKEA	CF124E	853986716000	853986716001
IKEA	CFNE120A+	850370596000	850370596000