

Modell	Code	
F45003	911913607	Electrolux
F45003M	911913608	Electrolux
F50777	911916275	Electrolux
F50777S	911916276	Electrolux
F50870FUB	911946620	Electrolux
F50870FUM	911946618	Electrolux
F50870FUS	911946619	Electrolux
F60760	911914603	Electrolux
F60760B	911914611	Electrolux
F60760M	911914604	Electrolux
F60870FM	911917605	Electrolux
F65011IA	911926650	Electrolux
F65011IB	911926648	Electrolux
F65011IM	911926649	Electrolux
F65011VI	911936624	Electrolux
F65080IB	911926607	Electrolux
F65080IM	911926606	Electrolux
F65080VI	911936602	Electrolux
F75011VIL	911986608	Electrolux
F80010VI	911936621	Electrolux
F80870M	911918604	Electrolux
F86010VI	911937610	Electrolux
F86080IA	911927608	Electrolux
F86080IM	911927609	Electrolux
F86080VI	911937602	Electrolux
F88010IM	911928626	Electrolux
F88010IM	911928626/01	ELECTROLUX
F88010VI	911938606	Electrolux
F88020IM	911924601	Electrolux
F88020VI	911934601	Electrolux
F88020VIL	911984701	Electrolux
F88080IM	911928618	Electrolux
F88080VI	911938604	Electrolux
F88090IM	911928605	Electrolux
F88090VI	911938602	Electrolux
F89020IM	911928634	Electrolux
F89020VI	911938609	Electrolux
F98010IMM	911928623	Electrolux
F99020IMM	911928633	Electrolux
FAV60850BIM	911232698	Electrolux
FAV60850BIM	911371008	Electrolux
FAV60860	911232723	Electrolux
FAV60860	911371022	Electrolux
FAV60860S	911371102	Electrolux
FAV65080IB	911235326	Electrolux
FAV65080IB	911372118	Electrolux
FAV65080IM	911235328	Electrolux
FAV65080IM	911372120	Electrolux
FAV65080VI	911235340	Electrolux

Modell	Code	
FAV65080VI	911372031	Electrolux
FAV80860M	911232736	Electrolux
FAV80860M	911371030	Electrolux
FAV86080IA	911235336	Electrolux
FAV86080IA	911372028	Electrolux
FAV86080IB	911235333	Electrolux
FAV86080IB	911372027	Electrolux
FAV86080IM	911235337	Electrolux
FAV86080IM	911372029	Electrolux
FAV86080VI	911235321	Electrolux
FAV86080VI	911372178	Electrolux
FAV88080IM	911372013	Electrolux
FAV88080VI	911235298	Electrolux
FAV88080VI	911372104	Electrolux